



# PRE-WIRED TRAILER LEADS

Increase your sales with our PRE WIRED TRAILER SYSTEM. This system makes re-wiring a trailer, a piece of cake. Next time a customer comes in for trailer cable why not offer them an easy 3 step wiring system that can be installed in minutes not hours. Then you can sell them the lights to match as well.

## OR

If a customer comes in to buy some lights. Ask them about their wiring and plug. 9 times out of 10 if a customer is upgrading the lights then the plug & wiring will need replacing as well.

This system is an easy up-sell with the average cost for a 6x4 trailer being under \$50 to the customer.

Our pre-wired system is compatible with the lights below.



**AP10153**



**AP10472**



**AP10085**

# EASY STEP BY STEP

## STEP 1

**Choose your type of trailer plug.**

We have three different plug types available.

## STEP 2

**Choose how long your trailer is.**


**Remember to allow for the draw bar!**

This section also has two extra wires for side markers if they are fitted to your trailer.

## STEP 3

**Choose how wide your trailer is.**

This section has two extra wires for number plate lamps.

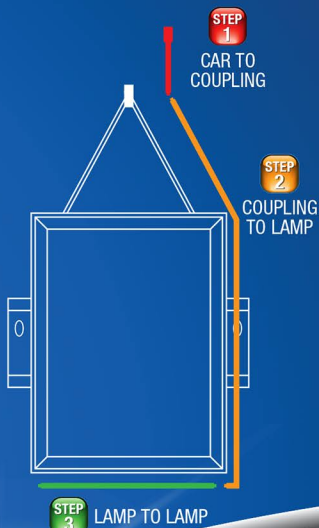

**ALWAYS ON THE MOVE**

### STEP 1



#### Car To Coupling

PART NO.	
AP83030	7 Pin Flat
AP83031	7 Pin Round
AP83032	7 Pin Small Round

### STEP 2



#### Coupling To Lamp

PART NO.	
AP83050	3.7 Metres
AP83053	5.5 Metres
AP83056	7.3 Metres

### STEP 3



#### Lamp To Lamp

PART NO.	
AP83040	1.1 Metres
AP83042	1.5 Metres
AP83045	2.1 Metres